

• **Over Current Setting Table**

Code No.	Current setting	Actuator Model	Controller Model
A	2.5A	LAS4-1	LAK2; LAK2B; LAK6B
B	3.0A	LAS-1; LAS3-1	LAK2; LAK2LR
C	4.0A	LAS-2; LAS3-2; LAS4-2; LAN1-1/-2/-3	LAK2; LAK2LR; LAK2D
D	5.0A	LAM3-3/-4	LAK2D; LAK4; LAK2B; LAK6B
E(24V)	6.0A	LAM3-2	LAK2D; LAK2B
E(12V)	6.0A	LAS-1(12V); LAS3-1(12V); LAS4-1(12V)	LAK2(DC)
F(24V)	7.0A	LAN1-1/-2/-3(24Q); LAM3-1	LAK2D; LAK2B; LAK6B; LAK4
F(12V)	7.0A	LAS-2(12V), LAS3-2(12V)	LAK2(DC)
G	8.0A	LAM-1/-2/-1A/-2A; LAN2	LAK2; LAK2LR
H	9.0A	LAN3	LAK6B
I	10A	For reservation	
J	12A	For reservation	
K	14A	For reservation	
L	15A	LAN1-1/-2/-3(12V); LAM-1/-2/-1A,-2A(12V)	LAK2(DC)
Z	**A	Special current value (special requirement)	

www.antrieb.ru